MBPI VEHICLE SERVICE CONTRACTS

GET EXACTLY WHAT YOU NEED FOR THE ROAD AHEAD

POWERTRAIN CARE

BASIC COVERAGE

Engine: Limited to all internally lubricated parts. The following external parts are covered only if damage is caused resulting from the failure of an internally lubricated part or a manufacturer's defect: Intake manifold, exhaust manifold, harmonic balancer, valve covers, timing gear cover, timing belt, water pump, fan clutch, fan blade, fuel pump and engine mounts, the engine block, engine head(s), cylinder barrels and rotor housing.

Diesel Engine: Limited to all internal and external parts as listed above in the Engine section.

Rotary Engine: Rotor, eccentric shaft, eccentric shaft bearings, and all internal and external parts as listed above in

Turbo/Supercharger: (factory installed only) Internal parts, vanes, shaft and shaft bearings. The following external part is covered only if damage is caused resulting from the failure of an internally lubricated part or a manufacturer's defect: Turbo/Supercharger housing.

Transmission: All internally lubricated parts contained within the transmission case. The following external parts are covered only if damage is caused resulting from the failure of an internally lubricated part or a manufacturer's defect: Flywheel, flex plate, torque converter, transmission mounts and the transmission case.

Transfer Unit – 4X4, AWD: All internally lubricated parts contained within the transfer case. The following external part is covered only if damage is caused resulting from the failure of an internally lubricated part or a manufacturer's defect: The transfer case.

Drive Axle Assembly: (front and rear) All internally lubricated parts contained within the differential housing or final drive case. The following external parts are covered only if damage is caused resulting from the failure of an internally lubricated part or a manufacturer's defect: Axle shafts, axle bearings, constant velocity joints, front hubs and front hub bearings, drive shaft carrier bearing, universal joints and yokes, the differential housing and final drive case.

Seals and Gaskets: Coverage applies only for the covered components listed above. (Applies to vehicles with 125,000 miles or less at the time of purchase).





Front Suspension: Limited to upper and lower control arms, control arm shafts and bushings, upper and lower ball joints, spindle assembly and bearings, steering knuckles, sway bar and bushings, coil/leaf springs, torsion bars, radius arm and

Rear Suspension: Limited to coil/leaf springs, torsion bars, spindle assembly and bearings, automatic leveling unit compressor, sensor and limiter control valve.

Steering: Limited to all internal parts contained within the steering box housing, worm gear and shaft, rack and pinion assembly, steering main and intermediate shafts, power steering electric motor, control valves, power steering pump and cooler, pitman and idler arm, tie rod ends, drag link.

Brake System: Limited to master cylinder, power assist booster, hydro-boost brake booster, combination valve, proportioning valve, hydraulic steel lines, disc brake calipers, wheel cylinders, backing plates and anti-lock brake system (sensors, rotors and drums excluded). The anti-lock brake system is limited to the following: anti-lock module, hydraulic booster assembly, hydraulic pump motor (sensors and relays are excluded).

Electrical System: Limited to alternator, voltage regulator, starter motor, starter solenoid, electric fuel pump/sending unit, engine cooling fan motor, front/rear wiper motor, door window motors/regulators, heater blower motor, power antenna motor, power seat motors, factory installed sun roof motor, power door lock actuators, convertible top motor. The following manually operated switches: turn signal switch, head lamp switch, emergency warning flasher switch, cruise control switch, wiper delay switch, window motor switch, seat motor switch, sun roof motor switch and convertible top motor switch.

Air Conditioning Unit: Limited to vehicle manufacturer's unit, compressor, clutch and pulley assembly, condenser, evaporator, accumulator, receiver dryer, expansion valve, orifice tube, heater/AC dash control unit, high/low pressure control switch, heater core and condenser fan motor.

Electronic Parts: Limited to instrument cluster (containing: speedometer, tachometer and oil pressure, fuel, volt and temperature gauges), electronic driver information display module, electronic ignition module, coil, main engine computer/processor, retard vacuum switch, anti-detonation sensor, cruise control servo, transducer/module, compass and thermometer.



PREMIER CARE

ITEMS NOT COVERED

(SEE REVERSE FOR A PARTIAL LISTING OF COVERED PARTS AND COMPONENTS)

- 1. Maintenance services and parts, including: engine tune-up, suspension alignment, wheel balancing, filters, lubricants, engine coolant, drive belts, radiator hose, heater hose, by-pass hose, wiper blades, air conditioning recharge, fluids, spark/glow plugs and wires, manual clutch disc lining, pressure plate, throw-out bearings, brake pads, drums, rotors and linings, distributor cap, wiper arms, PCV valve and PCV hose/line and exhaust system (except exhaust manifold).
- 2. Glass, lenses, sealed beams and light bulbs. Headlamp assembly, tail light assembly, brake light assembly and fog lamp assembly.
- 3. Tires, wheels and studs, wheel covers, battery and cables, shock absorbers.
- 4. Aftermarket parts and accessories not produced by the VEHICLE'S manufacturer.
- 5. Loss caused by contaminated fuel system, exhaust system. Fuel injectors covered for electrical failure only.
- **6.** Alignment of bumper and body parts, service adjustments/cleaning, tightening of fasteners (nuts, bolts, screws). Door handles, door hinges, cup holders, consoles, knobs, televisions, telephones, air shocks and air springs.
- 7. Bumpers, impact absorbers, sheet metal, body panels, frame and sub-frame, welds, carpet, trim, upholstery, convertible or vinyl tops, moldings and bright metal, air and water leaks, wind noise, weather strips, squeaks and rattles, paint, rust, airbag systems, safety restraint systems, dash pad and sun visors.

The following excluded parts are covered only in conjunction with a MECHANICAL BREAKDOWN of a covered part and when the cause of failure to the excluded part is directly caused by the MECHANICAL BREAKDOWN of a covered part: Filters, lubricants, fluids, engine coolant, drive belts, radiator hose, heater hose, by-pass hose, air conditioning recharge, spark/glow plugs, brake pads, drums, rotors and linings, door handles,

The following excluded parts are covered only in conjunction with a MECHANICAL BREAKDOWN of a covered part and when the cause of failure to the excluded part is an electrical failure directly caused by the MECHANICAL BREAKDOWN of a covered part: Headlamp assembly, tail light assembly, brake light assembly, fog lamp assembly, and sun visor light(s).

COVERED ITEMS	POWERTRAIN	сиѕтом	PREMIER
Substitute transportation during repairs	\checkmark	√	√
Substitute transportation during repairs Towing Service Flat Tire Change Emergency Gas Delivery Battery-Jump Start Service Key-Lockout Service Trip interruption protection	✓	\checkmark	√
Flat Tire Change	\checkmark	\checkmark	✓
Emergency Gas Delivery	\checkmark	\checkmark	✓
Battery-Jump Start Service	\checkmark	\checkmark	✓
Key-Lockout Service	\checkmark	\checkmark	✓
Trip interruption protection	\checkmark	\checkmark	✓
Engine	\checkmark	\checkmark	✓
Turbo or Supercharger	\checkmark	√	√
Transmission	\checkmark	√	√
Transfer Unit	\checkmark	√	√
4X4 or AWD system	\checkmark	√	√
Drive Axle Assembly	\checkmark	√	✓
Seals and Gaskets	✓	\checkmark	√
Front Suspension		\checkmark	✓
Rear Suspension		√	√
Steering		√	√
Brake System		√	√
Electrical System		√	√
Air Conditioning Unit		√	√
Electronic Parts		√	√
Everything else not specifically excluded (see reverse covered items)			√

PREMIER CARE COVERAGE INCLUDES:

Body/cable, manual antenna Bolt, brake hose to caliper Bolt/hut exhaust manifold heat Bolts, drive plate to torque conv Bonnet, air cleaner Booster, power brake unit Boot, convertible top latch Boot, driveshaft Boot, driveshaft rear Boot, dearshift lever Boot, driveshaft rear
Boot, gearshift lever
Boot, tie rod end
Bow, convertible top
Brace, track bar mounting
Bracket and bushing assembly, front
Bracket and roller, sliding door
Bracket assembly, power pulldown latch
Bracket assembly, tilt column
Bracket, air conditioning compressor
Bracket, air pump mounting
Bracket, axle trac
Bracket, deck lid power pulldown stick Actuator/solenoid/motor, electric
Adapter, disc brake
Adapter, binion
Adapter, transfer case to transm
Adapter, transmission
Adapter, transmission to engine
Adaptor, adjuster generator/air c
Adaptor, adjuster generator/air c
Adaptor/bracket, A/C compresso
Adjuster, electric seat assembly
Adjuster, bent nail-parking brake
Adjuster, brake automatic
Adjuster, front seat manual
Adjuster, front seat manual
Adjuster, rear seat manual
Air cleaner body
Air conditioning system
Alternator Bracket, clevis/bellcrank pvt
Bracket, devis/bellcrank pvt
Bracket, deck lid power pulldown stick
Bracket, differential support
Bracket, front spring shackle
Bracket, egnerator support
Bracket, injector pump support
Bracket, injector pump support
Bracket, load sensing proportioning valve
Bracket, pump
Bracket, quarter glass latch
Bracket, ear sway bar
Bracket, tension strut
Bracket, throttle cable
Bracket, thrack bar mounting
Breaker assembly, distributor
Brush plate, w/bushes, starter
Brushes, alternator Breaker, traks van multing Breaker, assembly, distributor Brush plate, w/bushes, starter Brushes, alternator Bumper jounce, rear spring Bushing front stabilizer bar Bushing w/plate, taligate hinge Bushing, axle housing Bushing, brake pedal Bushing, brake pedal Bushing, cradle isolator Bushing, distributor drive shaft Bushing, drive pinion Bushing, front support Bushing, front support Bushing, front support Bushing, front support Bushing, ladder beam Bushing, lower control arm Bushing, lower control arm Bushing, lower control arm strut Bushing, lower control arm strut Bushing, rear as housing Bushing, rear spring Bushing, rear spring Bushing, rear spring Bushing, rear spring shackle Bushing, spring eye Bushing, spring eye Bushing, starter pilot Bushing, tension strut bar Bushing/cushion, rear stabilizer sway Bushing, tension strut bar Bushing-cushion, rear stabilizer sway Bushing-cushion, rear driveshaft C/V joint, rear driveshaft C/V joint, rear driveshaft C/V joint, par Antenna, manual
Anti rattle, sliding door
Anti-lock brakes
Anti-rattle spring
Arm, assembly, dual rear doors check
Arm, front suspension lower compressi
Arm, front suspension lower lateral Arm, lateral
Arm, lower control
Arm, outer
Arm, rear lower control
Arm, rear suspension
Arm, rear trailing
Arm, sliding door Arm, sliding door
Arm, steering gear
Arm, steering gear idler
Arm, steering gear idler
Arm, steering spear idler
Arm, steering knuckle
Arm, taligate check
Arm, valve rocker
Arm/cover, wiper
Arm/spring, door check
Armature, starter
Armature, wiper motor
Assembly, differential-limited slip
Assembly, reading lamp and switch
Assembly, module, sunroof
Automatic tay/night mirror
Automatic transaxsle recondition
Automatic transaxsle recondition
Automatic transaxsle recondition Axle shaft (FWD)
Axle rear Ball and socket assembly, universal join Cable, control
Cable, deck release
Cable, gearshift control
Cable, gearshift crossover
Cable, gearshift crossover
Cable, pearshift crossover
Cable, hood latch release
Cable, hood retainer
Cable, hood retainer
Cable, park lock
Cable, park lock
Cable, power sunroof
Cable, power sunroof
Cable, power sunroof
Cable, power take/off control
Cable, power take/off control
Cable, power take/off control
Cable, throttle control
Cable, throttle control
Cable, throttle control
Cable, throttle had control
Cable, two speed axle control
Cable, two speed axle control
Cable, vent control
Caliper assembly, disc brake
Caliper/Cylinder, rear brake
Cam and bushings, upper arm control
Cam slide/block, sunroof
Cam, and control link-adjust
Cam, turn signal switch canceling
Camshaft
Canister, vapor
Cap, distributor
Cap, fuel tank filler
Cap, recovery bottle
Cap, transmission rear boot Bar, stabilizer, front
Base, oit filter
Bearing and hub assembly
Bearing inner, axie shaft
Bearing outer, intermediate axle shaft
Bearing, alternator
Bearing, alternator rectifier end shaft
Bearing, alternator, front
Bearing, axle shaft
Bearing, axle shaft
Bearing, camshaft
Bearing, connecting rod
Bearing, connecting rod
Bearing, crankshaft main
Bearing, front inner axle
Bearing, front inner axle
Bearing, front output shaft
Bearing, front suspension strut
Bearing, intermediate axle shaft support
Bearing, output shaft
Bearing, over-running clutch case
Bearing, propeller shaft center
Bearing, propeller shaft center
Bearing, rear output shaft
Bearing, silent shaft
Bearing, steering column shaft lower
Bearing, steering column shaft lower
Bearing, steering column shaft lower
Bearing, steering column shaft upper
Bearing, steering column shaft upper
Bearing, wheel Base, oil filter Cap, oil filler
Cap, recovery bottle
Cap, transmission rear boot
Cap/cover, master cylinder
Capacitor package, alternator
Capacitor, package, alternator
Capacitor, tadio ignition noise
Carrier, balance shafts
Cartridge assembly, turbine
Case, differential
Case, differential
Case, differential
Case, differential
Case, differential
Case, transavie
Case, transavie
Case, transavie
Case, transavie
Case, transmission Bearing, stub shall Bearing, wheel Bearing, wheel front Bearing, wheel rear Bearings, pinton
Bearings, upper and lower valve pinion
Bell crank, ignition switch
Bell housing/pump assembly
Bellcrank, accelerator control
Bellcrank, third seat
Block, cylinder
Block, isse/relay
Block, junction Cassette player
Catch, glove box door/storage box
Catch, third seat back
Catch/cable, hood safety
Center link
Centering spheres, steering column shaft
Chain and/or sprockets, balance shaft
Chain, oil pump drive

Changer, air cooler Changer, compact disc auto Channel, glass lift Check, sliding door Circuit breaker Clamp, tie rod adjustment Clip, concealed headlamp shaft reta Clip, fuel tank ground Clips, linkage
Clip, transmission/throttle body control
Clock, E.T. chronometer
Cluster, electronic instrument
Clutch assembly, compressor
Clutches and seals, overdrive
Coil, electronic ignition
Coil, evaporator
Coil, ignition
Collar, shift
Column assembly, steering
Combination Valve
Comp manifold
Companion flance, extension shaft Companion flange, extension shaft Companion flange, half shaft Compensator, high altitude valve pressor, reseal puter unit (MCU) (Micropressor) Connector/check valve windshield washer Contact and plunger Contract, horn Contracts, sliding door or rear door Control assembly, door latch remote Control assembly, instrument panel Control assembly, instrument panel (AT) Control module, ignition Control module, rear wiper/washer Control module/coverar intermittent Control module/governor, intermittent Control unit, ELC Control unit, torque converter
Control, assembly, rear heater
Control, latch lock
Control, telicining seat back release
Control, tailgate door catch
Control, tailgate latch
Controller, auto (ATC)
Controller, auto (ATC)
Controller, engine
Controller, transaxle electronic
Cooler lines and fittings
Cooler, engine oil
Cooler, external transaxle auxiliary
Cooler, flow check
Cooler, flow check
Cooler, over steering Cooler, flow check
Cooler, power steering
Core, heater
Core, rear heater
Core, rear heater
Coupling band, turbo housing
Coupling, spring lock
Coupling, spring lock
Coupling, viscous
Courtesy illumination
Cover, balance shaft gears
Cover, take automatic adjuster
Cover, cylinder head
Cover, differential gear
Cover, disconnect housing
Cover, disconnect housing reseal
Cover, gasket
Cover, gasket
Cover, gasket
Cover, oil cooler
Cover, oil cooler
Cover, oil cooler
Cover, rear axle housing-reseal
Cover, steering column
Cover, steering column
Cover, tappet
Cover, transmission
Cover/case, transfer gear replace
Cover/case, transfer gear replace
Cover/case, transfer gear reseal
Crankshaft
Crossmember front axle Crankshaft
Crossmember, front axle
Cushion, steering gear
Cylinder block
Cylinder head
Cylinder liner piston kit
Cylinder, clutch master Cylinder, clutch master
Cylinder, clutch master
Cylinder, clutch slave
Cylinder, console lock
Cylinder, convertible hydraulic
Cylinder, convertible hydraulic
Cylinder, power
Cylinder, wheel
Damper, crankshaft vibration
Damper, crankshaft vibration
Damper, dynamic
Damper, fuel pressure
Damper, motor mount
Damper, steering
Damper, transmission weight
Dial and gauge speedometer
Dial, gauge selector
Diaphragm, vacuum modulator
Diaphragm, vapor containment door vacu
Differential rescondition
Differential reseal
Diode, idle up
Diodes, alternator
Disc, control unit-distributor
Distributor, ignition-test and replace
Division channel, door glass, run
Dog, clutch

Dog, clutch
Door, locks rear
Door, air unit
Door, outside air vent
Door, recirculation
Doors, air units
Doors, bi-level

Doors, upper level heater Drag/center link Drain cock, radiator Drier, air suspension Drier, receiver

Drier, receiver
Drive and rail assembly, motorized seat
Drive and chain, replace
Drive end shield, alternator front
Drive gear injector pump
Drive gear, distributor
Drive unit, power sliding door
Drive unit, sunroof
Driveshatt/halfshaft

Driveshaft/halfshaft
Drum, overdrive direct clutch
Duct, air conditioning outlet
Duct, heater center
Duct, lap outlet
Duct, ram air
Duct, rear floor
Duct, upper level vent air outlet
Duct/gasket, defroster outlet
Eccentric, camshaft
Eccentric, idler pulley
Elbow, compressor inlet

Eccentric, idler pulley
Elbow, compressor inlet
Elbow, exhaust manifold
Elbow, water inlet
Electric fuel pump
Element, cigar lighter
Engine block
Engine replace
Engine, complete
Exciter ring, anti-lock brakes
Exhaust, turbine housing
Extension house or adapter
Extension housing bushing
Fan blades

Fastener, glass lift channel Field coil, compressor clutch Fitting, brake tube Fitting, oil level tube Fixture, extension rod

Fitting, oil level tube
Fixture, extension rod
Flange, front axle propeller shaft
Flange, propeller shaft to rear axle
Flange, universal joint
Flasher, hazard lights
Flasher, turn signals
Flex coupling, steering column shaft
Flex track, window regulator
Fluid, power steering
Flywheel, with ring gear assembly
Fork, shift
Fork/pad, shift
Forks, gearshift
Freon recovery
Fuel lines

Forks, gearshitt
Freon recovery
Fuel lines
Fuel pump
Fuel pump block off plate
Fuel tank filler, tube
Fulcrum ball
Fuse Link wiring harness
Gas seal, compressor crankshaft
Gasket, "O" ring, engine water pump
Gasket, "O" ring, oil filter base
Gasket, "O" ring, oil filter base
Gasket, "O" ring, ompressor manifold
Gasket, air pump diverter/control valve
Gasket, axle shaft flange
Gasket, camshaft end plate
Gasket, compressor valve plate
Gasket, compressor valve plate
Gasket, cylinder head
Gasket, cylinder head
Gasket, cylinder head cover
Gasket, differential w/carrier assembly
Gasket, engine water pump rear housin
Gasket, exhaust gas recirculation valve
Gasket, exhaust manifold
Gasket, exhaust manifold

Gasket, exhaust gas recirculation valve Gasket, exhaust manifold Gasket, exhaust manifold heat control Gasket, exhaust manifold heat control Gasket, exhaust manifold heat control Gasket, front output rear bearing retainer Gasket, front output rear bearing retainer Gasket, front output shaft front bearing Gasket, incule pump Gasket, incule pump Gasket, input gear bearing retainer Gasket, input gear bearing retainer Gasket, intake manifold cover Gasket, intake manifold elbow Gasket, master cylinder cap Gasket, oil pan Gasket, oil pan Gasket, oil pan Gasket, input gear sector shaft Gasket, telease bearing cover Gasket, steering gear sector shaft Gasket, thermostat housing Gasket, thermostat housing Gasket, throttle body Gasket, transafer case to adapter Gasket, transafer case to adapter Gasket, transer case to adapter Gasket, water pump housing Gasket/seals, initake manifold Gate, shift lever Gauge, fuel Gauge, temperature-repair Gauge, turbo boost

Gauge, fuel
Gauge, temperature-repair
Gauge, turbo boost
Gauge, volt/oil pressure
Gear assembly, power steering re
Gear assembly, steering
Gear box assembly, windshield w
Gear housing, starter
Gear selector, indicator
Gear set, differential side
Gear, camshaft distributor drive
Gear, oil pump drive/dist
Gear, starter reduction
Gear, window lift motor
Gear/sprocket, crankshaft
Gears, balance shaft
Generator, pulse

Generator, pulse
Generator, pulse
Governor, support and parking gear
Governor, computer assembly
Governor, valves and weights
Guide, sliding door
Guide, sunroof
Guide, timing chain
Guide, track window

Guide, valve Guide/track, sunroof Hall effect, pickup plate and coil Handle assembly, hood release Handle, gas release Handle, in hood release Harness, vacuum
Head, cylinder
Head, steering gear housing
Heat shield, turbocharger/injector
Heater assembly
Heater, air cleaner
Heater assembles the steering in the steerin Heater, air cleaner Heater, engine jacket Heater, intake manifold Heater, intake manifold ele Heater/adapter, fuel Hell coil, bolt hole thread Hinge, floor mounted seat Hinge, floor mounted seat Hinge, glove compartment Hinge, hood Hinge, roof vent Hinge, sunroof Hinge, movable glass Hook, sliding door Horn replace Horn, ETACS theft alarm Hose assembly emission of Hose, air horn supply
Hose, anti-lock brake
Hose, brake flexible
Hose, crankcase closed vent
Hose, fuel flex
Hose, fuel tank filler
Hose, fuel tank filler
Hose, fuel tank to neck
Hose, high pressure fuel
Hose, manifold pressure
Hose, power brake vacuum
Hose, pump press
Hose, pera flexible brake
Hose, secondary air supply
Hose, speed control vacuum
Hose, transaxle cooler
Hose, turbocharger
Hose, vacuum control Hose, turbocharger
Hose, vacuum control
Hose, vacuum control
Hose, vacuum pump bypass
Hose, vapor canister
Hose, washer, windshl/rr window
Hose, washer, windshl/rr window
Hose/bleed tee
Hose/blee, fuel tank vent
Hose/lube, air conditioning
Hose/lube, discharge
Hose/lube, rear air conditioning
Hose/lube, to evaporator
Hoses and tubes, air conditioning
Hoses discharge, /liquid
Hoses, air conditioning rear
Hoses, ATC
Hoses, inside sensor
Housing extension-reseal
Housing heater Housing extension-reseal
Housing heater
Housing vent
Housing wifield coils, starter
Housing, air conditioning
Housing, air conditioning heater
Housing, air contlet louver
Housing, lower
Housing, crankcase extension
Housing, distribution
Housing, distributor Housing, distributor
Housing, engine thermostat
Housing, engine water pump
Housing, evaporator
Housing, evaporator housing ed
Housing, front axle
Housing, gearshift
Housing, heat distribution
Housing, heater front
Housing, heater rear
Housing, instrument cluster
Housing, rear output shaft
Housing, rear output shaft
Housing, selector shaft
Housing, selector shaft Housing, steering column shift
Housing, steering column upper bearing
Housing, steering gear
Housing, thermostat
Housing, transfer case extension
Housing, wiper motor
Housing/cover, air conditioning front Hub, rear Hydraulic assembly, anti-lock brakes Igniter set Indicator, oil level Indicator, transmission oil level Injection tube Injector, fuel Injector, fuel
Input shaft oil level
Insulator, gearshift mechanism
Insulator, mount/support
Insulator, propeller shaft center bear
Insulator, rear support
Insulator, rear sway link
Insulator, steering column shaft hearing
Intermediate, shaft/T-case
Internal regulator, alternator
Interrupt starter (EVS)
Isolators, rear spring
Jacks, headphone
Kickdown servo
Knob. pedal assembly actuator Knob, pedal assembly actuator Knuckle, rear suspension Knuckle, Fear suspension
Knuckle, steering
Lamp w/switch assembly, underhood
Lamp w/switch map, overhead, instrum
Lamp w/switch map
Lamp, glove box
Lamp, illuminated entry
Lamp, w/switch assembly, trunk
Latch assembly, convertible top

Latch assembly, deck lid pull down Latch assembly, dual rear doors Latch assembly, striker sliding door Latch movable glass Latch rear seat back Latch RR DR Latch, console Latch, deck lid, manual/electric rpr Latch, door/liftgate/deck lid
Latch, front seat back
Latch, nood
Latch, panel, sunroof
Latch, panel, sunroof
Latch, rear bucket seat release
Latch, RR window
Latch, second seat back
Latch, the par roof
Latch, tailgate (RWD)
Leak detection pump
Lever assembly, parking brake
Lever, clevis/belier
Lever, gearshift
Lever, gearshift pivot
Lever, manual control
Lever, parking brake floor operated
Lever, parking brake floor operated
Lever, steering wheel tilt
Lever, throttle control
Lever, turn signal switch
Liftgate release
Limiter, instrument voltage
Linage, load sensing proportioning valve
Lines, car heater
Line/hose, oil feed
Line/pipe, turbo coolant
Lines, convertible pump
Lines, transaxle oil cooler
Link assembly, windshield washer
Link, latch lock control to latch
Link, lock cylinder to latch
Link, pushrod to latch
Link, pushrod to latch
Link, pushrod to latch
Link, rear stabilizer
Link, rear stabilizing bar
Link, rear stabili Manifold, thake
Manifold, two piece intake
Manual transaxle assembly
Manual transaxle overhaul
Manual transaxle recondition
Manual transmission assembly
Manual transmission overhaul
Manual transmission recondition
Mast, antenna
Mast, power antenna
Mast, power antenna
Master cylinder
Master cylinder-aluminum
Mechanism, electric recliner
Mechanism, gearshift
Mechanism, trip odometer reset
Mechanisms, relng/forward folding seat
Mirror, inside rear view
Mirror, manual outside door
Mirror, remote beated outside
Mirror, remote beated outside
Mirror, remote power outside door
Modulator assembly
Modulator, lock-up control
Module, air conditioning control
Module, ATC power/vacuum assembly
Module, blower motor control
Module, blower motor control
Module, central timer
Module, central timer Module, blower motor power
Module, central timer
Module, compressor control
Module, concealed headlamp
Module, control power door lock
Module, control unit, anti-lock bra
Module, crankcase closed vent Module, engine controller
Module, engine controller
Module, EVIC engine node
Module, fan assembly
Module, fuel gauge damper
Module, fuel gauge warning light
Module, fuse block (EVS) Module, gauge alert Module, heated seat control Module, İseaTed seat control Module, ignition control Module, ignition control Module, instrument panel dimmer Module, lamp out Module, lamp system Module, level unit Module, load leveling Module, maintenance reminder Module, memory seat control Module, message center Module, mode display Module, mode display Module, overdrive Module, power Module, power Module, power steering control Module, power sunroof Module, power train control Module, radio antenna Module, rear drive line Module, security alarm Module, speed sensor Module, steering wheel horn pad Module, tech drive

Module, transmission control Module, turn signal with wiper switch Module, warning lamp Module, windshield wiper Monitor, dash Monitor, electric voltage Monitor, electric voltage
Motor and pump assembly, conver
Motor assembly, electric sunroof
Motor or gasket, shift (vacuum)
Motor, air mix damper
Motor, automatic idle speed
Motor, blend air door
Motor, blower rear Motor, blower rear
Motor, deck lid power, pull down striker
Motor, electric seat adjuster
Motor, fresh air
Motor, fresh air recirculation
Motor, headlamp rotating
Motor, mode door
Motor, power door/liftgate
Motor, power went window
Motor, pull down
Motor, quarter window Motor, quarter window Motor, radiator fan Motor, rear A/C-heater Motor, rear heater blower Motor, rear window wiper Motor, shift Motor, shift
Motor, starter
Motor, window lift
Motor, windshield wiper
Motor/actuator, mode door
Motor/module/ATC blend air door
Motor/pump, enthusiast seat
Mount assembly, front suspension strut
Mount, engine Mount, engine Mount, multifunction switch Mount, multifunction switch
Navigation system
Negative recitifier assembly, alternator
Nozzle defroster duct
Nozzle spiston cooling system
O-Ring, low and reverse lever pin
O-Ring, steering gear sector shaft cover
Odometer
Oil seal, axle housing inner
Oil seal, axle shaft
Oil seal, axle shaft inner
Oil seal, crankcase
Oil seal, crankchaft rear bearing comp
Oil seal, crankshaft rear bearing lower
Oil seal, differential driveshaft
Oil seal, drive pinion
Oil seal, drive shaft
Oil seal, criont pump housing
Oil seal, front pump housing
Oil seal, rear-wheel bearing
Oil seal, sient shaft
Oil seal, steering gear Oil seal, rear-wheel bearing
Oil seal, silent shaft
Oil seal, steering gear
Oil seal, steering gear
Oil seal, crankshaft front bearing
Oil seals, steering gear
Oil seal, crankshaft front bearing
O-Ring and gasket, expansion valve
O-Ring bedplate to block
O-Ring bedplate to block
O-Ring bedplate to block
O-Ring per viv to evap, RR unit
O-Ring ine, suction, to RR unit
O-Ring or gasket, inlet, evaporator
O-Ring or gasket, cutlet, evaporator
O-Ring or gasket, cutlet, evaporator
O-Ring, gasket, cutlet, evaporator
O-Ring, distributor adapter
O-Ring, RR unit tee to exp viv
O-Ring, RR unit tee to liquid line
O-Ring, RR unit to suction
O-Ring, steering gear housing head
O-Rings, water pump inlet tube
O-Rings, fuel injector
O-Rings, fuel system
O-Rings, fuel system
O-Rings, gear control valve to housin
O-Rings, transfer tube
Output shaft bearing, front
Output shaft bearing, rear
Overrunning clutch assembly
Pan, oil
Parking lock sprag
Polick up set Pedal, accelerator
Pick up set
Pilot bushing
Pin, door hinge
Pinion bearings
Pinion, speedometer
Pipe, fuel inlet
Piston, disc brake caliper
Pivot, door vent
Pivot, door vent
Pivot, windshield wiper
Plate assembly, throttle
Plate, rear shock absorber mount
Plate, steering column
Plate, torque converter drive
Plates, rear axle clutch
Plug, camshaft rear bearing
Plug, cylinder block core hole
Plug, cylinder head core hole
Plug, cylinder head core hole
Plug, cylinder head core hole
Plug, gasket, engine block, clnt drain
Pot coupling, steering gear column shaft
Potentiometer, load
Power brake booster
Power transfer unit
Printed circuit board
PSNDL indicator Power transfer unit
Printed circuit board
PRNDL indicator
Prop, hood
Propeller/Driveshaft shaft assembly
Pulley w/hub, compressor clutch
Pulley, alternator
Pulley, crankshaft
Pulley, fan

Pulley, idler
Pulley, pump
Pulley, water pump
Pump assembly, air horn
Pump assembly, front
Pump, power steering
Pump, vacuum
Pump, washer
Pump/motor assembly, air Radio
Rail assembly, convertible top
Rail/track, sliding door
Ratchet, hand brake lever
Ratchet, parking brake lever
Reaction shaft with support
Rear housing
Rear seat video (DVD)
Rear sway bar link
Rear window defroster
Rear, headlamp control Rear window defroster Rear, headlamp control Receiver module, keyless entry Rectifier end shield, alternator rear Regulator, front window Regulator, fuel pressure Regulator, rear door glass Regulator, speed control Regulator, voltage Relay, condenser fan Relay, duel pick up start run Relay, EATX/reverse lamp Relay, ECI control Relay, electric door lock Relay, electric seat adjuster m Relay, electric window Relay, ETACS horn Relay, fuel heater Relay, fuel shutoff solenoid Relay, horn
Relay, ignition switch time delay
Relay, ignition switch time delay
Relay, ignition switch time delay
Relay, illuminated entry
Relay, intank fuel pump
Relay, keyless entry
Relay, ister release
Relay, low beam
Relay, low beam
Relay, low beam
Relay, low fuel
Relay, main ABS
Relay, manifold heater
Relay, modulator poser (abs)
Relay, modulator poser (abs)
Relay, module, anti-lock brakes
Relay, park lamp
Relay, parsing control
Relay, passing control
Relay, pump/motor-anti-lock brakes
Relay, radio lamp control
Relay, radio lamp control
Relay, starter
Relay, starter
Relay, starter
Relay, starter
Relay, starter
Relay, sunroof
Relay, sys/wrng lamp (ABS)
Relay, tapiler tow
Relay, top motor
Relay, trans unlock
Relay, trans unlock
Relay, trans unlock Relay, ignition Relay, trains unlook Relay, trans unlook Relay, transmission control-system Relay, transmission cooler fan Relay, turn signal/cornering lamp Relay, turn torque converter (RWD) Release, fuel filler door/LFTGT/DK LD Reluctor/governor distributor Reservoir, hydraulic control unit Reservoir, master cylinder Resistor, E.C.I Resistor, fuel pump Retainer. Intermediate shaft oil seal Retainer, crankshaft front bearing oil Retainer, differential bearing Retainer, DRGL CHN Retainer, DRGL CHN
Retainer, front output gear bearing
Retainer, front output rear bearing
Retainer, front strut cover
Retainer, governor support
Retainer, speedometer pinion
Retainer, sunroof cable guide
Retainer/case, crankshaft rear bearing
Reverse servo Reverse, servo
Rheostat switch, instrument panel lamp Ring gear and pinion set Ring gear w/drive plate assembly Ring gear, flywheel Ring, reverse lockout Rings, piston Rod and /or swivel gearshift control Rod, accelerator Rod, axle lateral Rod, connecting Rod, gearshift control Rod, load sensing prope Rod, sliding/DR R/CTL Rod, transfer case shift

Rods, throttle body/transmission Roller, window regulator Rotor, alternator Rotor, distributor Run, door glass Seal rings, value pinion Teflon Seal, air conditioner relief valve Seal, at tank fuel filler Seal, at mashaft position sensor Seal, at tank fuel filler
Seal, camshaft position sensor
Seal, condenser fan switch
Seal, convertible hydraulic connec
Seal, crossover shaft
Seal, differential carrier
Seal, differential side gear
Seal, discharge line to condenser
Seal, distributor shaft
Seal, drier outlet
Seal, drier outlet
Seal, end cover
Seal, evaporator/H-valve
Seal, front output shaft Seal, evaporator/IH-valve Seal, front output shaft Seal, fuel tank filler tube Seal, fuel tank sending unit Seal, half shaft inner Seal, half shaft outer Seal, heater housing Seal high press cut-off Seal, hub dust Seal, hub dust
Seal, input shaft
Seal, input shaft cover
Seal, intermediate axle shaft
Seal, long stub shaft
Seal, low press cut-off switch
Seal, oil filler pipe
Seal, oil filler tube Seal, oil filler tube
Seal, oil pump
Seal, output shaft
Seal, pinion input
Seal, pinion input
Seal, pinion input
Seal, rear differential cover
Seal, rear differential cover
Seal, rear drive line output shaft
Seal, selector shift
Seal speadomater riping oil seal, selector shift
Seal, speedometer pinion oil
Seal, suction line
Seal, suction line to compressor inlet
Seal, Tic shift, oil
Seal, throttle valve lever shaft
Seal, timing belt case/cover
Seal, transfer case rear shaft
Seal, transfer case
Seal, valve body manual lever seal, transfer case
Seal, valve body manual lever
Seal, valve stem oil
Seal/O-ring, steering gear housing end
Seals, axle shaft
Seals, cylinder liner
Seals, front and rear clutch
Seals, output shaft
Seals, pump reservoir oil Seals, output shaft
Seals, pump reservoir oil
Seals, steering gear stub shaft thrust
Seals, upper and lower valve pinion
Seat assembly, front spring
Seat, front spring lower
Sector shift, steering gear
Sending unit, too Sending unit, tole tank
Sending unit, oil pressure
Sending unit or switch, engine temperature
Sending unit/switch, transmission
temperature
Sensor assembly, in vehicle/ATC
Sensor block, anti-lock brakes
Sensor, "G" Antilock brakes
Sensor, AFT pressure
Sensor, air flow/air intake/barometer
Sensor, air inlet
Sensor, air inlake temp
Sensor, air thermo Sensor, air intake temp Sensor, air thermo Sensor, arbient Sensor, ATC ambient Sensor, ATC solar Sensor, ATC solar Sensor, Atter temperature Sensor, battery temperature Sensor, camshaft position Sensor, charge temperature Sensor, detonation Sensor, denoine speed Sensor, engine speed Sensor, fluid level Sensor, heated air door Sensor, height Sensor, height (air suspension) Sensor, oil level Sensor, overhead temperature display Sensor, oxygen
Sensor, pedal travel
Sensor, photo
Sensor, pressure (anti-lock brakes)
Sensor, shock (EVS) Sensor, spark knock
Sensor, speed (trans control)
Sensor, speed (trans control)
Sensor, steering wheel angular velocity
Sensor, sunroof magnetic
Sensor, temperature (EGR)
Sensor, throttle manifold air temp
Sensor, trans temp
Sensor, trans temp
Sensor, transaxle output speed
Sensor, transaxle turbine input speed
Sensor, transaxle turbine input speed
Sensor, valve position oil
Sensor, walve position
Sensor, wheel speed-Anti-lock brakes
Sensor/switch, coolant temperature
Sensor/switch, throttle position
Servo motor, speed control Sensor, spark knock Servo motor, speed control

Speedometer Spindle, stub axle

Shaft, inner axle
Shaft, intermediate
Shaft, intermediate axle
Shaft, output
Shaft, propeller rear
Shaft, rocker arm
Shaft, side column signal
Shaft, silent
Shaft, steering column
Shaft, strng col fix cplng tp gear
Shaft, torque
Shaft, transaxle selector
Shafts-balance Switch, dual function pressure (ABS) Switch, dual pressure Switch, electric deck lid release Switch, electric recliner Switch, electric seat adjuster Switch, electric window master Switch, engine temperature light Switch, enthusiast seat adjuster Switch, enthusiast seat adjuster
Switch, enthusiast seat adjuster
Switch, exhaust mode actuator
Switch, four wheel drive control
Switch, four wheel drive engagement
Switch, headlamp dimmer
Switch, headlamp dimmer
Switch, headlamp door
Switch, high pressure cut off
Switch, high pressure power steering
Switch, hood
Switch, ignition
Switch, ignition
Switch, ignition key buzzer
Switch, illuminated entry door handle
Switch, instrument panel dimmer
Switch, instrument panel dimmer
Switch, low pressure cut off
Switch, luggage compartment
Switch, message center vacuum
Switch, message center vacuum Shafts-balance
Shell and clamp, cigarette lighter
Shield, drive belt splash
Shield, load sensing valve
Shield, starter motor heat
Shifter, transfer case
Shoes, pot coupling steering colur
Shroud, condenser fan
Shroud, radiator fan
Silencer, sepirator Shroud, radiator tan Silencer, aspirator Siren (EVS) Slide, deck lid torsion bar Slide, front door regulator lift Slide, glass edge Slide, rear door regulator lift Slider, rear door Switch, message center vacuum
Switch, neutral starter w/backup lamp
Switch, oil level indicator
Switch, oil pressure
Switch, overdrive cancel
Switch, overdrive cancel
Switch, poverhead console light
Switch, parking brake warning lamp
Switch, pin (ES)
Switch, pod
Switch, pod-right
Switch, pod-right
Switch, power lift gate
Switch, power lift gate
Switch, power sliding door
Switch, power sliding door
Switch, power sliding door
Switch, power vent window
Switch, power/economy Slider, rear door
Snap rings, turbine
Socket, instrument panel lamp
Solenoid assembly, deck lid power pull
Solenoid assembly, distribution/air switch
Solenoid assembly, transaxle
Solenoid, air suspension
Solenoid, EGR purge control
Solenoid, fuel cut off
Solenoid, quel cut off
Solenoid, overnor pressure Solenoid, governor pressure Solenoid, idle Solenoid, idle up Solenoid, ifftgate latch Solenoid, multi-displacement system Switch, power take/off safety switch Switch, power vent window Switch, power/economy Switch, PRNDL position Switch, push button vacuum Switch, radiator fan Switch, rear blower motor Switch, rear window defroster Switch, rear window wiper and washer Switch, rear window wiper and washer Switch, rear window wiper and washer Switch, read lamp Switch, security alarm Switch, shift indicator light Switch, speed control Switch, speed control Switch, speed control Switch, steering wheel radio control Switch, steering wheel radio control Switch, stop lamp Switch, sunroof Switch, trans. Temp Switch, transaxle oil pressure Switch, transwission comfort selector Switch, turn signal cancel Switch, under storage illumination Switch, under storage illumination Switch, under storage illumination Switch, wind spield wiper/washer Switch/button assembly, EVIC Switch/relay, electric sunroof Switch, electr Solenoid, oxygen feedback Solenoid, oxygen leeddack Solenoid, purge control Solenoid starter Solenoid, torque converter lockup Solenoid, transmission Solenoids, intake manifold Speakers, radio Spindle, stud axie
Spring retainer assembly, pull dow
Spring steering column lock lever
Spring, brake shoe return
Spring, column tilt
Spring, front coil
Spring, gearshift lever
Spring, hood hinge
Spring, load sensing proportioning Spring, hood hinge
Spring, load sensing proportioning valve
Spring, oil pressure relief valve
Spring, oil pressure relief valve
Spring, overdrive direct clutch
Spring, rear
Spring, tension, ck arm
Spring, throttle control return
Spring, trans rod/throttle return
Spring, valve
Spring/clip, brake shoe hold down
Sprocket, camshaft
Sprocket, intermediate shaft
Sprocket, oil pump drive
Sprocket, silent shaft
Stabilizer, door glass Sprocket, silent shaft
Stabilizer, door glass
Stabilizer, glass lift channel
Standpipe/check valve, oil filter
Stator, alternator
Steering column assembly
Steering wheel
Storage reservoir
Stow 'n Go seating mechanisms
Strap, fuel tank support
Strap, ground
Striker assembly, deck lid power pulldown
Striker, door/liftgate latch
Striker, hood latch
Striker, manual/electric deck lid Tappet, roller type Tappet, roller type
Tappet, valve
Tee, brake tube
Tensioner and/or guide, balance shift
Tensioner, serpentine drive belt
Tensioner, timing belt/chain
Terminal block, alternator
Thermister, intake air heater
Thermostat
Throttle body – assembly
Tie rod end
Timer, glow plug
Timing belt tensioner
Timing belt/chain
Timing chain
Timing pin, assembly Striker, manual/electric deck lid Striker, RR ST latch Striker, RR ST latch
Striker, sliding door to inner catch
Striker, sliding door to inner catch
Striker, ST latch
Striker, windshield header folding
Strut assembly, rear
Strut, lower arm control
Strut/damper, engine anti-roll
Stud, gearshift lever picot
Stud, shock absorber lower mounting
Sub-assembly, transfer case
Sun gear overdrive
Sunroof assembly
Support assembly seat belt
Support, ealiper
Support, ealiper
Support, extension housing rear Tone wheel (anti-lock brakes)
Torque converter
Torque shaft, gearshift control
Torque tube
Torsion axle and arm assembly
Torsion bar
Track, front door glass
Track, glass lift
Track, rear door glass
Track, rear quarter glass
Track, suifing door upper
Track, sunroof
Track, sunroof
Track, sunroof side
Transaxle assembly Support, caliper
Support, extension housing rear
Support, rear brake
Support, torque tube
Support/actic assy, sliding door
Support/Insulator, extension housing
Switch assembly, deck lid power pull de
Switch assembly, door locking
Switch AfC condenser for control Irack, sunroof side
Transaxle assembly
Transaxle overhaul
Transaxle recondition
Transducer, pressure
Transfer case assembly
Transfer chain/sprocket
Transfer case assembly
Transfer chain/sprocket
Transfer gear set
Transistor, power
Transmission, overhaul
Transmission, recondition
Transmitter (EVS)
Tube assembly, fuel
Tube assembly, gearshift selector
Tube, air cleaner heater
Tube, air cleaner inlet/outlet
Tube, air conditioning condensate
Tube, are conditioning condensate
Tube, extension
Tube, crankcase vent
Tube, EGR
Tube, extension
Tube, fixed orifice Switch, A/C condenser fan contro Switch, A/C condenser fan control Switch, air conditioner push button Switch, air conditioner on/off control Switch, air temp Switch, ambient sensor Switch, back-up lamp Switch, blower motor Switch, brake fluid level Switch, cargo lamp Switch, clutch cycling Switch, clutch pedal position Switch, clutch/ignition interlock Switch, combination turn signal, hear Switch, console illumination Switch, console illumin Switch, convertible top Switch, convertible top
Switch, coolant temperature
Switch, courtesy lamp
Switch, disarm-door lock
Switch, disarm-underhood
Switch, door ajar
Switch, door lamp
Switch, door lock/power window
Switch, drier outlet

Tube, oil filter/dipstick
Tube, orifice
Tube, pump return
Tube, spark plug
Tube, steering column gearshift
Tube, steering column gearshift
Tube, tee to axle
Tube, tee to right hose
Tube, tee to right hose
Tube, to left brake hose
Tube, transfer
Tube/fitting, brake
Tubes assembly, rear A/C unit
Tubes condenser/liquid
Tubes, transaxle oil cooler
Turbocharger assembly
Turbocharger inse and fittings
Turbocharger wastegate
U bolt, front spring
U bolt, rear spring
Universal joint, axle shaft
Universal joint, half shaft
Universal joint, half shaft
Universal joint, distributor
Vacuum check valve
Vacuum control, distributor
Vacuum/connector nipple
Valve assembly, sensor Valve body, speed control
Valve body, speed control
Valve check/shraeder
Valve control
Valve pinion/w Teflon seal rings
Valve plate, compressor
Valve plate, SCTN REED VLV
Valve, air bypass
Valve, air idle bypass
Valve, air switching/reflight Valve, air idle bypass
Valve, air switching/relief
Valve, anti-lock brake solenoid
Valve, aspirator
Valve, canister check valve combini
w/switch
Valve, compressor service
Valve, cooling system bleed
Valve, crankcase closed vent
Valve, deceleration
Valve, deceleration
Valve, EGR control
Valve, expansion
Valve, fuel check
Valve, fuel check
Valve, opear control Valve, gear control Valve, heated air door delay Valve, high pressure relief
Valve, jet
Valve, jet
Valve, jet
Valve, load sensing proportioning valve
Valve, manifold heat
Valve, power brake check
Valve, pressure control
Valve, pressure limit
Valve, proportioning
Valve, purp flow control
Valve, pressure limit
Valve, proportioning
Valve, purp flow control
Valve, purge control
Valve, park advance
Valve, spark advance
Valve, spark advance
Valve, two-way
Valve, water
Valve/cap, recovery bottle
Valve/grommet, rollover
Valves, solenoid
Vent, rear axle
Viscous coupler
Water box, thermostat
Wheel, blower motor
Wheel, rear blower
Wiring harness, antiliock brakes
Wiring harness, clearance lamp
Wiring harness, clearance lamp
Wiring harness, clearance lamp
Wiring harness, electhic mirror
Wiring harness, electric antenna contre
Wiring harness, electric door lock
Wiring harness, electric imirror
Wiring harness, electric ende mirror
Wiring harness, electric imirror
Wiring harness, electric imiror
Wiring harness, electric miror
Wiring harness, electric imiror
Wiring harness, electric miror
Wiring harness, electric window lift
Wiring harness, electric window wilit
Wiring harness, fuel injector cap
Wiring harness, electric window defoger
Wiring harness, erear window defoger
Wiring