

ADDITIONAL BENEFITS:

Emergency Roadside Assistance

Available 24 Hours a day
7 Days a week
365 Days a year

- Towing Assistance
- Flat Tire Assistance
- Fuel, Oil, Fluid and Water Delivery Service
- Lock-out Assistance
- Battery Assistance

Automobile

Truck

Marine

Motorcycle

All-Terrain Vehicles



P.O. Box 852770 • Richardson, TX 75085
(800) 242-7316
www.smartautocare.com



This brochure is not a contract but an outline of the Smart Autocare Five Star Vehicle Service Agreement program. See your contract for exact terms, coverages and exclusions.

Five Star Vehicle Service Agreement



Here's What's Covered.



ENGINE

All internal lubricated parts within the engine including pistons, piston rings, piston pins, crankshaft, main bearings, thrust washer, connecting rods, connecting rod bearings, camshaft, camshaft sprocket, camshaft bearings, timing belt/chain, timing chain gears, timing chain guides, timing belt/chain tensioner, push rods, rocker arms, rocker arm shafts, balance shaft, hydraulic lifters, solid lifters, intake valves, exhaust valves, valve guides, valve springs, valve spring retainer, valve keepers, valve stem seals, oil pump, silent shaft. Harmonic balancer; intake manifold; exhaust manifold; freeze plugs; throttle valve cable; engine mounts. Cases, housings, engine block, oil pan and cylinder heads are covered only if damaged by the failure of an internal lubricated part.

Diesel Engine: All of the above listed parts including diesel injection pump, injectors and vacuum pump.



TURBOCHARGER/SUPERCHARGER

(factory installed only) Turbocharger/Supercharger Housing and all internal lubricated parts.



TRANSMISSION

All internal lubricated parts within the transmission including torque converter, valve body, valve body shift solenoids, accumulator rings, accumulators, adjusters, bands, bearings, boost valve, center support chain, check balls, clips, clutch drums, clutch piston, clutch packs (automatic transmission only), control rings, counter shaft, detent valve, gears, governor, governor gear, output shaft, parking gear, planetary gears carrier, planetary gears, pressure regulator valve, pressure switches, ring gears, roll pins, separator plate, servo rings, servo sleeves, shift forks, shift shafts, shift valves, shifter shaft, snap rings, sprags, springs, sprockets, stator shaft, sun gear shell, sun gears, synchronizer hub, synchronizer key(s), synchronizer ring, synchronizer sleeves, synchronizer springs, synchronizer(s), transfer shaft. Transmission mounts; transmission mount bushings; flywheel/flexplate; transmission cooler; oil lines; detent cam; detent cam spring; front pump; front pump gears; front pump guide rings; front pump vanes; vacuum modulator; auxiliary valve body; modulator valve; parking pawl; speedometer drive gear. Transmission cases, housings, and transmission oil pan are covered only if damaged by the failure of an internal lubricated part.



TRANSFER CASE

All internal lubricated parts within the transfer case including main shaft, output shafts, bearings, drive sprocket, synchronizers, planet carriers, shift forks, chain. Transfer case is covered only if damaged by the failure of an internal lubricated part.



DRIVE AXLE (FRONT/REAR WHEEL DRIVE)

All internal lubricated parts within the drive axle/transaxle assembly including differentials, ring gear, pinion gear, pinion bearings, axle bearings, axle races, axle flange, carrier bearing, center bearings, differential carrier, drive axle bearings, pins retainers, shims, side gears, slip joint, spider gears. Pinion flange; U joints; axle shafts; CV joints; drive axle; drive shaft; half shafts; hub bearings; wheel bearings. Drive axle housing is covered only if damaged by the failure of an internal lubricated part.



FOUR WHEEL DRIVE/ALL WHEEL DRIVE

All internal lubricated parts within the drive axle/transaxle assembly including differentials, ring gear, pinion gear, pinion bearings, axle bearings, axle races, axle flange, carrier bearing, center bearings, differential carrier, drive axle bearings, pins, retainers, shims, side gears, slip joint, spider gears. Pinion flange; U joints; axle shafts; CV joints; drive axle; drive shaft; half shafts; wheel bearings; automatic locking hubs; manual locking hubs; hub bearings; four wheel drive actuator motor; front axles; front drive shaft; four wheel drive engagement switch. Drive axle housing is only covered if damaged by the failure of an internal lubricated part.



STEERING

Power steering pump; rack and pinion gear and steering gearbox.



BRAKES

Master cylinder; wheel cylinders; disc brake calipers; vacuum assist booster; proportioning valve; hydraulic lines and fittings; ABS.



FRONT AND REAR SUSPENSION

Upper and lower control arms; control arm shafts and bushings; upper and lower ball joints; king pins and wheel bearings; struts and strut inserts.



AIR CONDITIONING

Air conditioner compressor; clutch and pulley; evaporator; condenser; expansion valve; and blower motor. Accumulator/drier and orifice tubes are only covered in connection with replacement of an above listed component and only if they have failed.



ELECTRICAL

Alternator; voltage regulator; starter motor; starter solenoid and starter drive; turn signal switch; stop lamp switch; ignition switch; wiper switch; washer pump and switch; headlamp switch; defroster switch; blower speed switch; window motors; door actuators; sunroof motor.

Enhanced Electrical: Power window motors; power door lock actuators; power door lock switches; window regulator; wiper motor; wiper switch and window switch.



FUEL DELIVERY

Electric and mechanical fuel pumps; fuel pressure regulator; fuel tank sending unit; metal fuel lines and fuel tank.



COOLING SYSTEM

Water pump, Electric fan motor and fan clutch and heater control valve.



EMISSIONS

EGR valve/solenoids/sensors; vacuum canister; vapor return canister; vapor return lines/valves; air pump/lines/valves; emission vapor sensors.



SEALS & GASKETS

Seals and Gaskets of covered components designed to prevent the loss of necessary coolants, lubricants and fluids are covered. Coverage will expire when your vehicle reaches 150,000 miles as indicated on your odometer or the expiration of the term of this Agreement, whichever occurs first. After 150,000 miles seals and gaskets will be covered only if required in conjunction with a covered repair.