



Benefits & Features

Veritas Global Simplicity Plans

✓ Emergency Roadside Assistance

We pay for the cost of emergency roadside services, including:

- Towing
- Battery Jumpstarts
- Flat Tire Changes
- Lockout Assistance
- Fuel Delivery (You are responsible for fuel costs)

✓ Rental Car Coverage

We pay for the expense of a rental car when your vehicle's failure is approved for repair.

✓ Trip Interruption Benefits

In the event you experience a breakdown 100 miles away from your home, we will pay for a portion of your meals and lodging for covered repairs.

✓ Nationwide Protection

All of our plans can be used nationwide, so if you are traveling and experience a breakdown, you can rest assured your plan will be accepted.

✓ Transferable Coverage

If you sell your car, you can transfer the coverage to the new owner, which increases the value of your vehicle!

* Please view each contract for full details on coverage of each plan.

All coverage options come with 24 hour roadside assistance, towing, and a rental car program.



Cars have problems.

Everyone has insurance on their vehicles to protect them in the event of an accident. However, many people who have collision insurance never use it. On the other hand, nearly every vehicle will require repairs due to mechanical failure. An average engine or transmission can cost thousands of dollars to repair. While these are examples of major repairs, minor repairs can add up to hundreds of dollars over the time you own the vehicle.

The question you need to ask is simple: **do you want to pay for these huge repair costs or would you rather someone else pay it for you?** With a Veritas vehicle protection plan, we pay the costs so you don't have to. In many situations, the cost of a single covered repair pays for the entire protection plan!

A mechanical breakdown can be very stressful, not only costing you money, but time. This is why **all our protection plans come with emergency roadside assistance, first day rental car benefits, and travel interruption coverage.**

With a **Veritas protection plan**, you have someone to call if you are ever stranded due to a breakdown. We will put you in a rental car and most importantly, cover the cost of your repairs to get you back on the road. We provide you with peace of mind, knowing your vehicle is covered by a company backed by an "A" rated insurer, accredited by the Better Business Bureau, and a reputation for providing the best customer service in the industry.

**Please see your contract for details*

ADMINISTRATOR:

Veritas Global Protection Services, INC
3550 North Central Ave, Suite 800
Phoenix, AZ 85012
(888) 572-4310

ADMINISTRATOR IN FLORIDA:

Central Administrative Service Corporation of
Florida, INC dba Veritas Global Protection of
Florida
4830 W. Kennedy Blvd., Suite 600, Tampa, FL
33609
(888) 583-3280

FL Company Code: 33922

FL License Number: 18-824206825

ADMINISTRATOR IN CALIFORNIA:

Veritas Global Insurance Services INC
7381 W 133rd St, Suite 200, Overland Park, KS 66213
(888) 572-4310

CA License Number : 0N02262

OBLIGOR IN CALIFORNIA:

Old Republic Insured Automotive Services, Inc.
8282 South Memorial Drive, Tulsa, OK 74133

CA License Number: 0C79822

(888) 572-4310 | www.veritasprotection.com



Veritas
Global Protection

📍 SIMPLICITY PLANS



veritasprotection.com/simplicity

SIMPLICITY PLANS

Levels of Coverage.



Powertrain

This plan covers the most important components on your vehicle including the Engine, Turbo/Supercharger, Transmission, Transfer Case, Drive Axle.



Comprehensive

Covers all of the Veritas Global Simplicity Powertrain components plus additional important components such as Electrical Components, Air Conditioning Components, Suspension Components.



Comprehensive Plus

This level of coverage includes all the components from Comprehensive along with an enhanced list of components from already covered systems.



Exclusionary

Our best coverage! Veritas Global Simplicity plans cover virtually every mechanical and electrical component on the vehicle with the exception of a small list of exclusions. This is our exclusionary level of coverage.



WRAP

Expands the manufacturer's long-term powertrain coverage to include virtually all parts of your vehicle. Simply stated, if it breaks or wears out, and is not among a short list of exclusions, it is covered.



Compare Coverage Levels →

Refer to our comparison chart on right to find the best Veritas Global Simplicity Plan for your vehicle.

engine (gas or diesel)	
All Coverage Levels: All internally lubricated engine parts including: pistons, piston rings, piston pins, crankshaft and main bearings, connecting rods and bearings, camshaft and bearings, timing chain or belt, timing gears, tensioners/guides, intake and exhaust valves, valve springs, valve guides, oil pump and oil pump housing, push rods, rocker arms, rocker arm shafts, hydraulic and solid lifters; intake & exhaust manifold; distributor shaft and housing; harmonic balancer; metal valve covers; timing gear cover; air filter and housing; water pump; fuel pump; vacuum pump; thermostatically controlled air intake; oil pan; engine block and heads are covered if damaged by the Failure of an internally lubricated moving part. All Coverage Levels EXCEPT Powertrain: Thrust washer, camshaft sprocket, balance shaft, valve spring retainer, valve keepers, silent shaft, freeze plugs, throttle valve cables. Cases and housings are covered only if damaged by the failure of an internal lubricated part.	
transfer unit (4x4)	
All Coverage Levels: All internal parts; transfer case is covered if damaged by the Failure of an internally lubricated moving part.	
drive axle(s)	
All Coverage Levels: All internal parts; "U" joints; propeller shafts; CV/Tripod joints; differential case is covered if damaged by the Failure of an internally lubricated moving part.	
turbo / supercharger (factory only)	
All Coverage Levels: All internal parts; housing is covered if damaged by the Failure of an internally lubricated moving part.	
transmission	
All Coverage Levels: All internal parts; torque converter; vacuum modulator; mounts; covers, pans and cases are covered if damaged by the Failure of an internally lubricated moving part. Note: No Coverage is afforded for clutch assembly; pressure plate; flywheel; throw out bearing; worn synchronizers or cables. All Coverage Levels EXCEPT Powertrain: Clutch drums, clutch piston, clutch packs, flywheel flex plate.	
air conditioning / heating system	
All Coverage Levels EXCEPT Powertrain: Blower motor; air conditioning compressor; air conditioning compressor clutch; air conditioning compressor pulley; air conditioning condenser; air conditioning evaporator; air conditioning expansion valve. Refrigerant only if needed in conjunction with the repair of a Covered Part. Exclusionary and Comprehensive Plus Coverages ONLY: Heater core; air conditioning receiver dryer; air conditioning orifice tube; air conditioning power module, controller and relay; air conditioning and heating dash control unit/temperature control programmer; accumulator; heater control valve; high/low cut-off switches; cycling switch; idler pulley; idler pulley bearing; serpentine belt tensioner; electronic temperature control sensors; temperature sensor internal; ambient temperature sensor.	
suspension	
All Coverage Levels EXCEPT Powertrain: Upper and lower control arms; control arm shafts and bushings; upper and lower ball joints; strut and strut inserts; wheel bearings and king-pins. Exclusionary and Comprehensive Plus Coverages ONLY: Radius arm and bushings; trailing arm; track bar; stabilizer shaft, links, and bushings; torsion bars; torsion bar mounts; torsion bar bushings; coil springs; leaf springs; steering knuckles; strut bar; strut mounts; strut bushings; spindles; steering dampener; electronic height level sensor; electronic height level controller; electronic height level air compressor; compressor relay; mode switch; and wheel seals.	
steering	
All Coverage Levels EXCEPT Powertrain: Steering gear; rack and pinion; power steering pump; and steering box. Exclusionary and Comprehensive Plus Coverages ONLY: Rack and pinion mounts and bushings; power steering hoses and couplings; power steering cooler; steering main and intermediate shafts; steering column; steering column bearings; steering column couplers; electronic power steering motor; pitman arm; idler arm; tie rods; drag link; tilt wheel mechanism; rack bellows; center link; control valve; relay rod.	
cooling system	
All Coverage Levels EXCEPT Powertrain: Water pump; cooling fan clutch; cooling fan electric motors; and heater control valve. Exclusionary and Comprehensive Plus Coverages ONLY: Belt tensioners; radiator; thermostat; oil cooler; fuel injectors; fuel injection rails; fan blade assembly; and coolant reservoir sensor.	
hybrid	
Exclusionary and Comprehensive Plus Coverages ONLY: IMA control unit for battery; IMA control unit for electric motor; junction board assembly; IMA motor stator assembly; IMA motor rotor assembly; PDU unit (pre-driver); PDU converter.	
fuel system	
All Coverage Levels EXCEPT Powertrain: Gasoline System: Fuel tank; fuel sending unit; fuel pump; fuel pressure regulator; and metal fuel lines. Diesel System: Fuel tank; fuel sending unit; fuel pump; high pressure fuel pump; lift pump; accessory vacuum pump and injector pump; fuel injectors; fuel distributor; fuel pressure regulator; fuel/water separator; metal fuel lines; throttle body; idle air control solenoid; idle air control motor; warm up regulator. Exclusionary and Comprehensive Plus Coverages ONLY: Throttle body; idle air control solenoid; idle air control motor; and warm up regulator.	
electrical	
All Coverage levels EXCEPT Powertrain cover a number of electrical and enhanced electrical components. Please see your contract for details.	
brakes	
All Coverage Levels EXCEPT Powertrain: Brake master cylinder; brake power assist boosters; disc brake calipers; wheel cylinders; proportioning valve; brake hydraulic lines and fittings. ABS SYSTEM – ABS booster; ABS pump/motor; ABS control processor; ABS dump valve; ABS sensors; ABS solenoids; ABS electronic control compressor; ABS hydraulic control unit; ABS modulator valve; ABS compensating valve; ABS accumulator. Exclusionary and Comprehensive Plus Coverages ONLY: Brake power assist valves; bleeders; brake adjusters; backing plates; brake pedal apply pin; combination valve; metering valve; vacuum and fluid reservoirs; hydro boost unit; parking brake cable; pressure differential switch; brake fluid level sensor; residual pressure check valve; return spring; self-adjuster mechanism; springs clips and retainers; parking brake lever; parking brake ratchet assembly.	
seals and gaskets	
All Coverage Levels: Seals and gaskets, if needed, are covered for the following assemblies: Engine; Turbocharger/ Supercharger; Transmission; Transfer Unit and Drive Axle(s). All Coverage Levels EXCEPT Powertrain: Seals and Gaskets of covered components designed to prevent the loss of necessary coolants, lubricants and fluids are covered. Coverage will expire when your vehicle reaches 150,000 miles as indicated on your odometer or the expiration of the term of this Agreement, whichever occurs first. After, 150,000 miles seals and gaskets will be covered only if required in conjunction with a covered repair.	

* At the Administrator's option, replacement parts used in covered repairs may include new, remanufactured, pre-owned or non-original equipment manufacturer parts.

POWERTRAIN	COMPREHENSIVE	COMPREHENSIVE PLUS	EXCLUSIONARY